visionary DESIGNS ™

10'

10'

Top View

SETUP INSTRUCTIONS

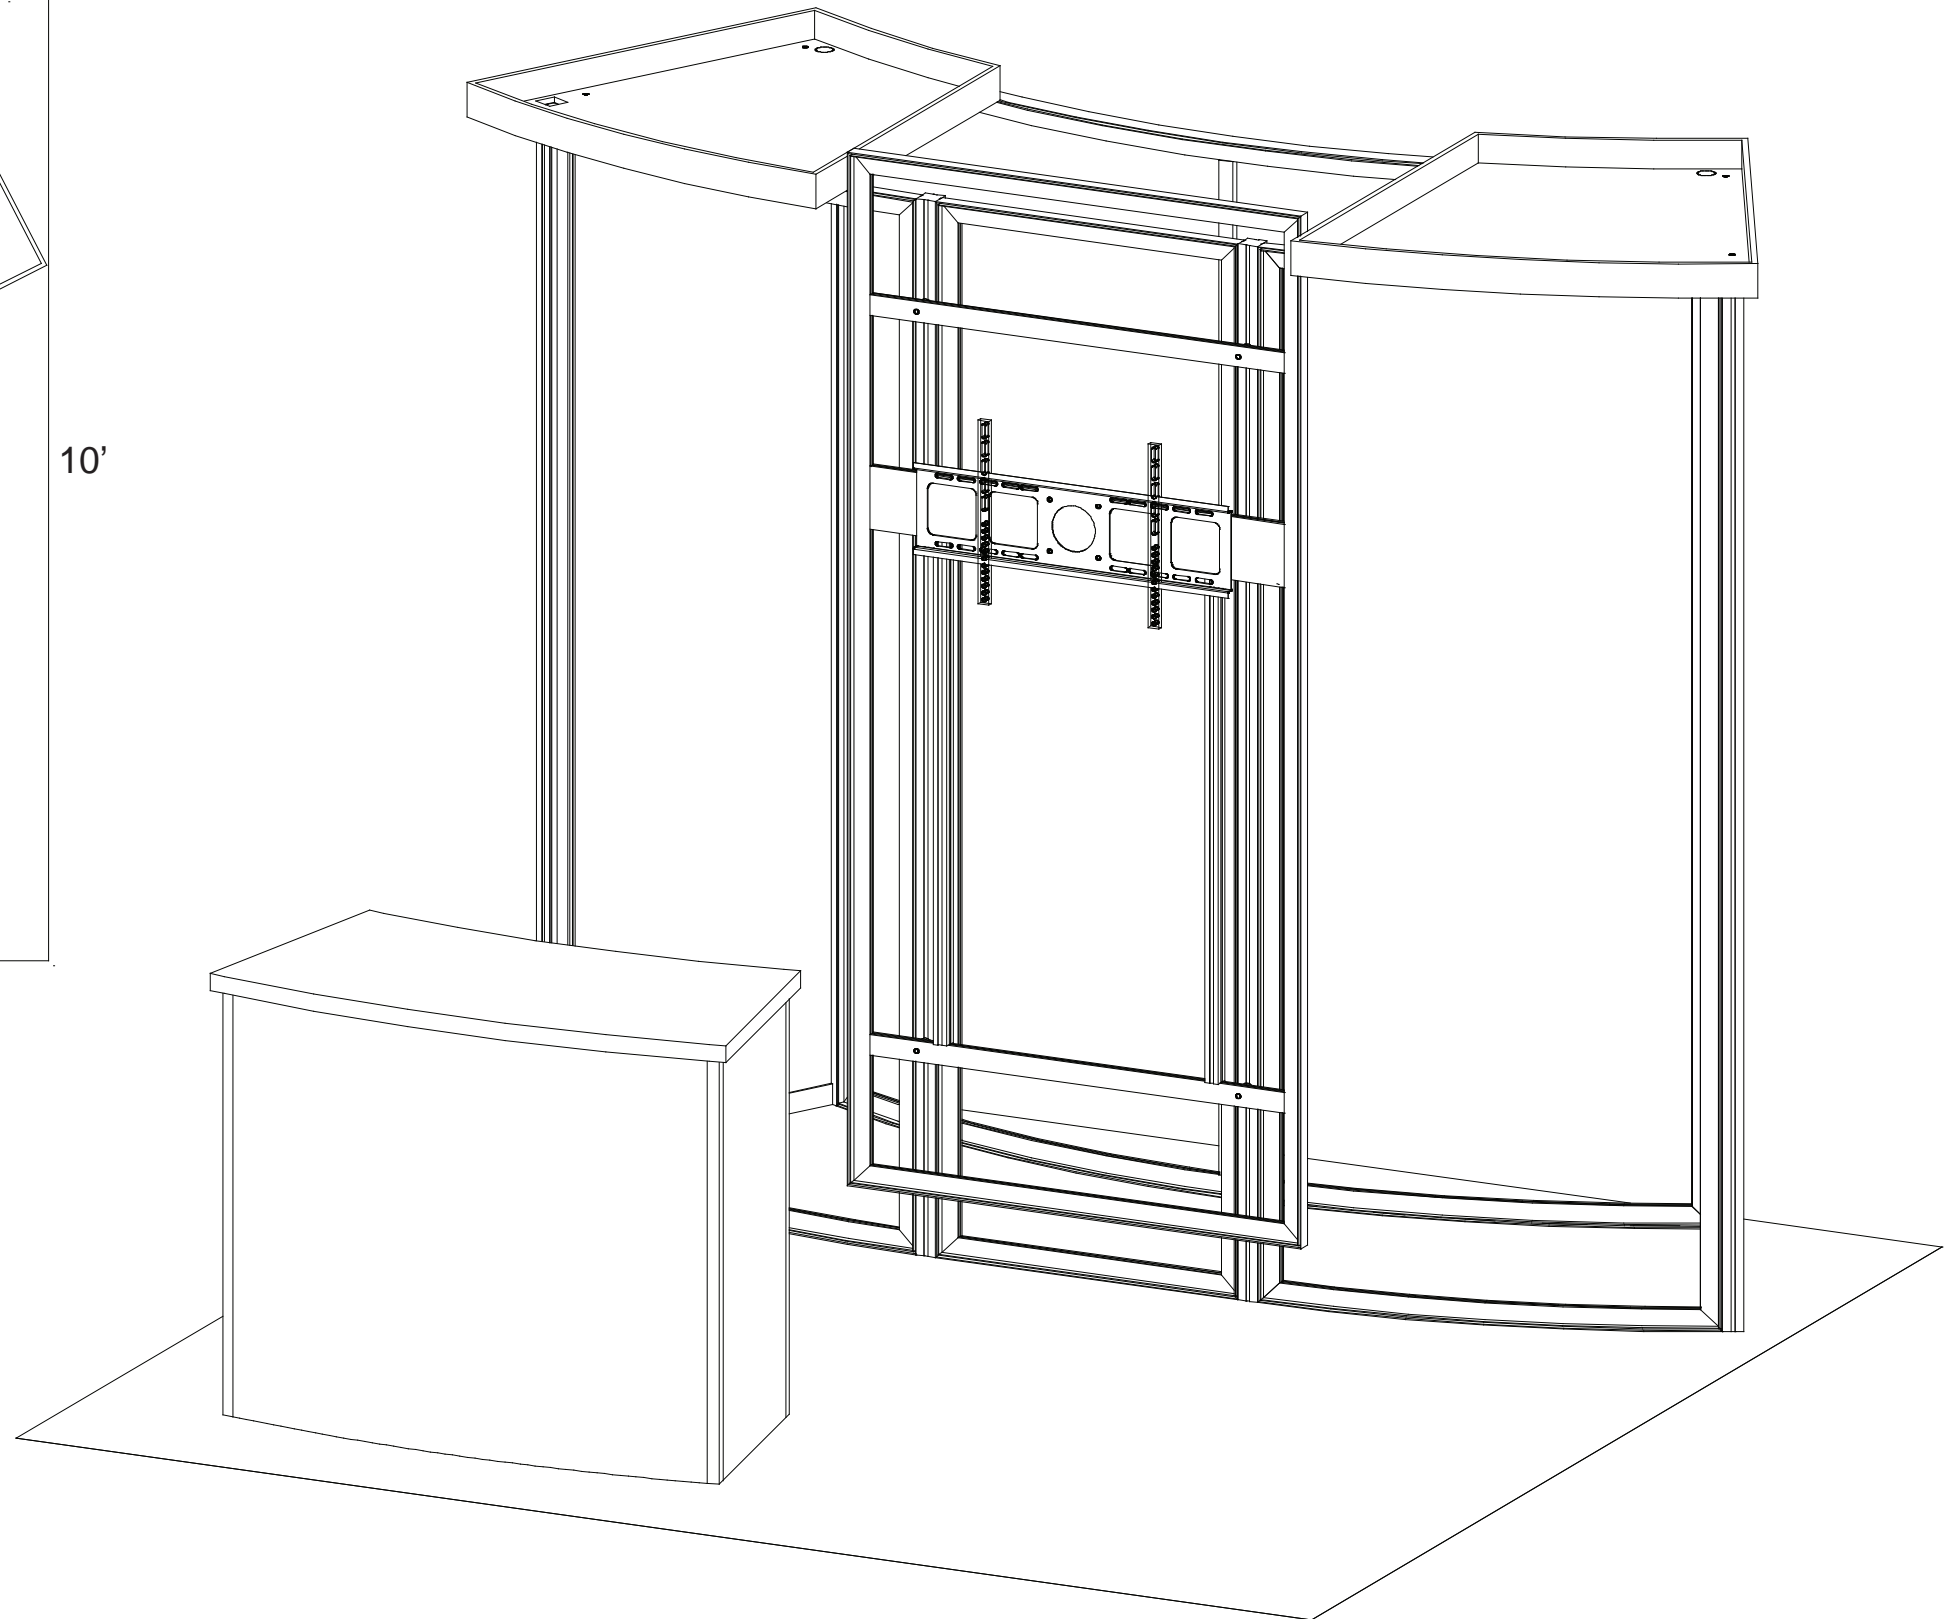If you would like to tell us about your experience with your setup instructions please email us at **info@classicexhibits.com**
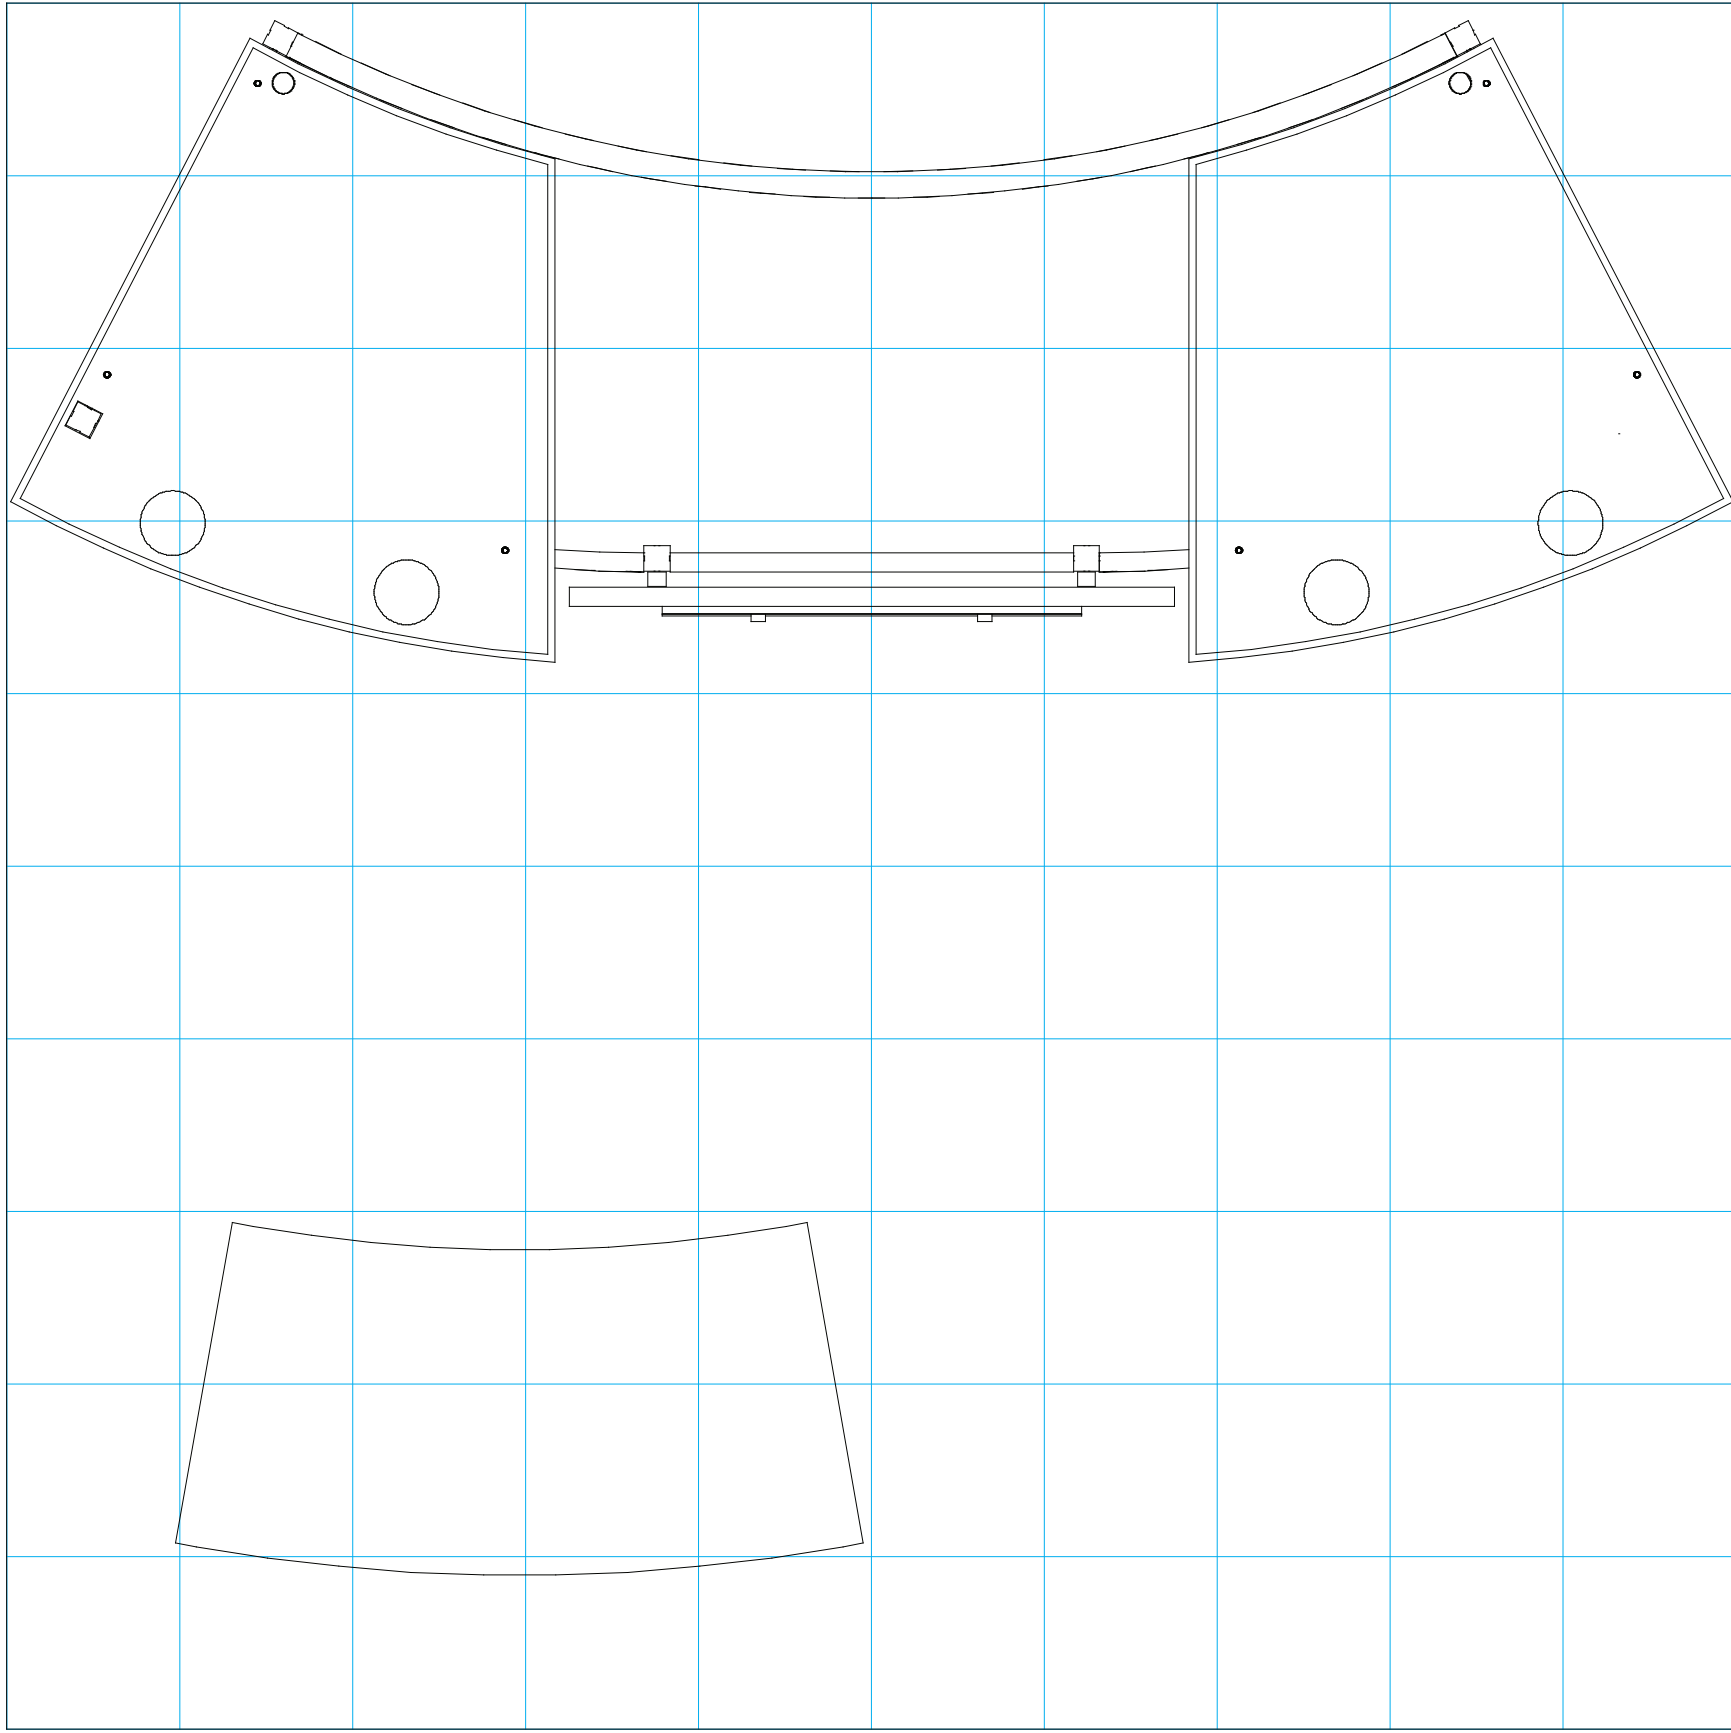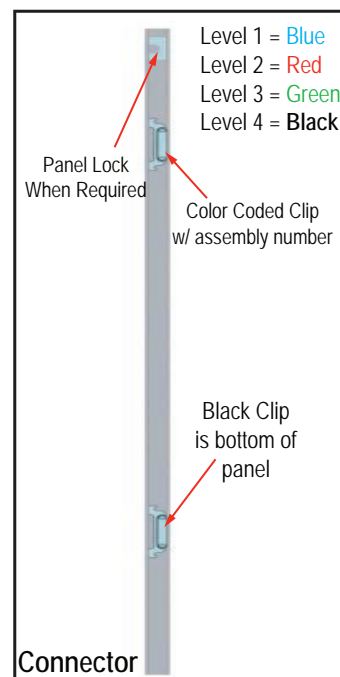
= 1 sq foot

euro lt|*HYBRIDS*

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration.
They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

Panel Lock When Required

Level 1 = Blue
Level 2 = Red
Level 3 = Green
Level 4 = Black

Color Coded Clip w/ assembly number

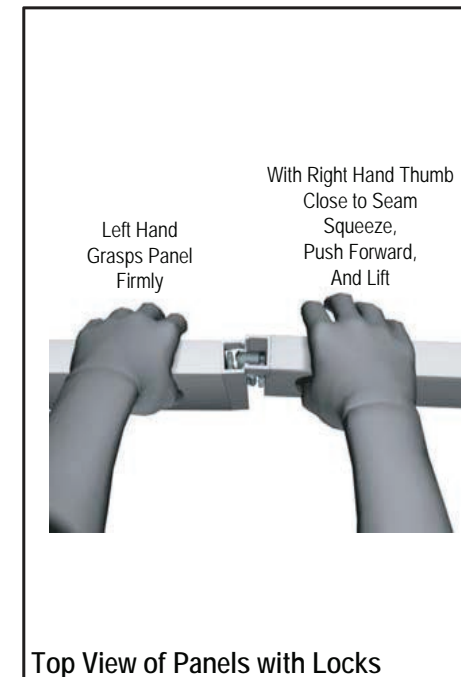Black Clip is bottom of panel

Connector

Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

Left Panel   Right Panel

Cut Away View of Slide Clips
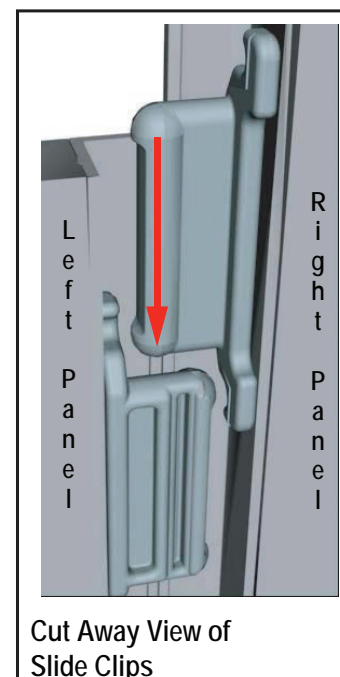
Components connect together by aligning them and sliding downward connecting clips together.

Panel Lock When Required

Color Coded Clip w/ assembly number is top of panel

Example of Connection
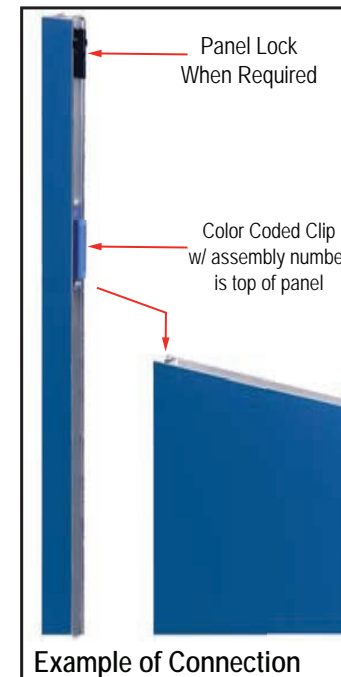
Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

Left Hand Grasps Panel Firmly

With Right Hand Thumb Close to Seam Squeeze, Push Forward, And Lift

Top View of Panels with Locks

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

## General Setup Instructions for Extrusion System

The Tool

Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screw-driver may be required.

Detail A

Typical Connection
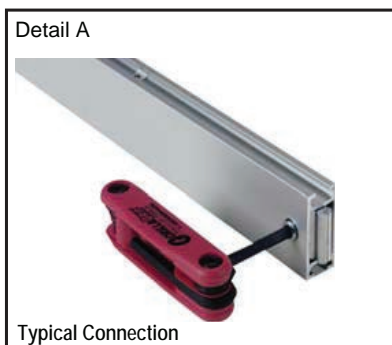
Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

Typical Connection (cont'd)


Detail B

13
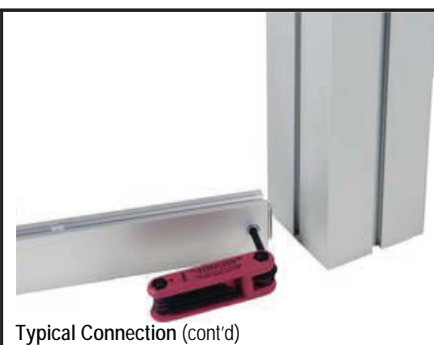
Numbered Label

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.

Detail C

Horizontal Inline Connection (remove only one setscrew)
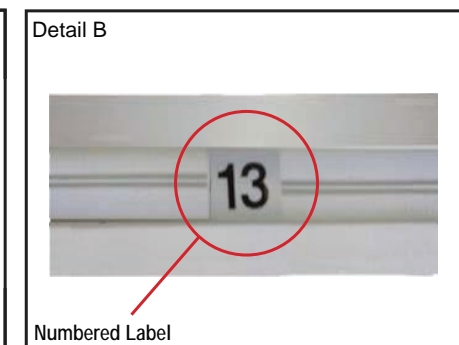
Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.


Detail D

Base Plate Connection

Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

Detail E

Setscrews

Vertical Connection (remove only two setscrews)
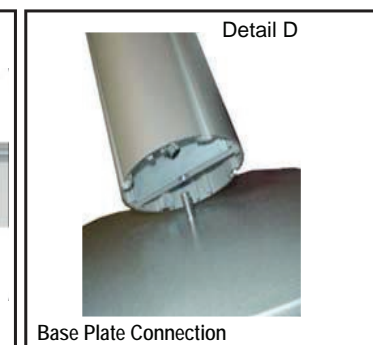
When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller sections which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

1) Locate channels along the edges of extrusions

2) Insert graphic corners first into channels then center point of graphic into channels. Allows for proportional fit around the perimeter of the extrusion.

3) Working from center to corner, slide silicon edge on graphic into channel.

4) After all edges of graphic have been inserted into channels, step back and assess graphic fit, make adjustments where needed.

1

2

3
Fold edges over.

Insert into groove of frame

4

visionary ™
DESIGNS

Visionary DESIGNS™
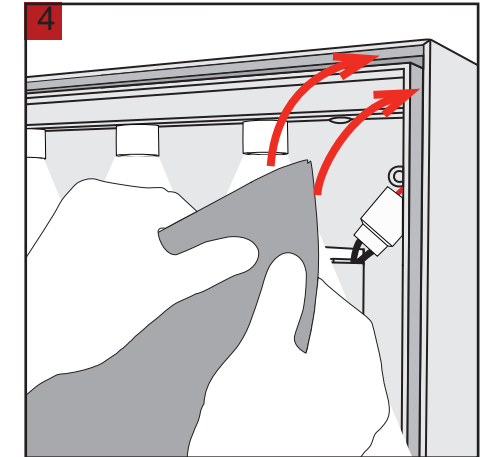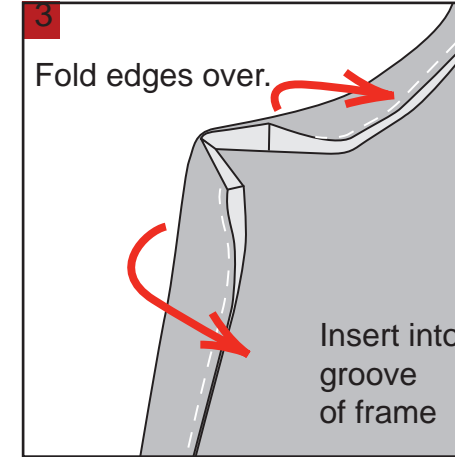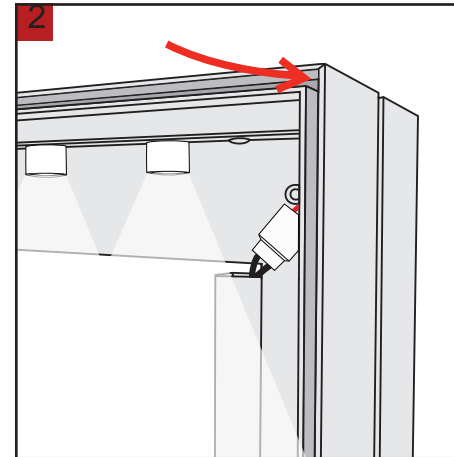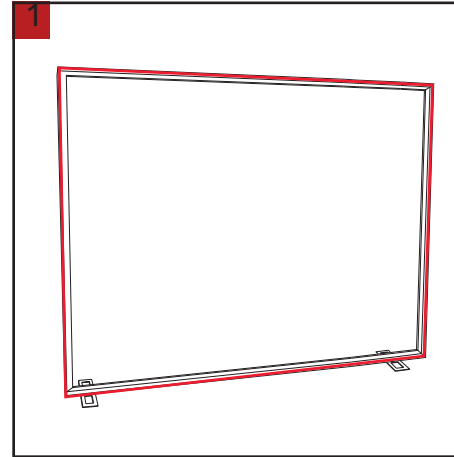
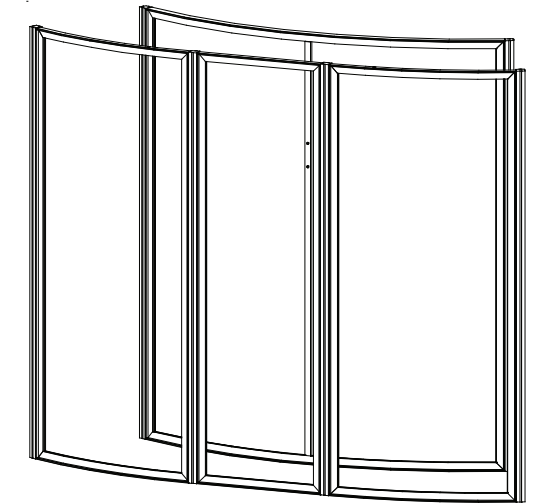| Item	Qty.	Description
1	1	92" S44 Vertical Extrusion
1A	1	92" TSP49 Vertical Extrusion
2	1	92" S44 Vertical Extrusion
2A	1	92" TSP46 Vertical Extrusion
3	1	92" S44 Vertical Extrusion
3A,3B	1,1	92" TSP46 Vertical Extrusion
4	1	92" S44 Vertical Extrusion
4A,4B	1,1	92" TSP46 Vertical Extrusion
5	1	92" S44 Vertical Extrusion
5A	1	92" TSP46 Vertical Extrusion
6	1	92" S44 Vertical Extrusion
6A	1	92" TSP49 Vertical Extrusion
8,8A	1,1	28" TSP46 curved Horizontal Extrusion
9,9A	1,1	40" TSP46 curved Horizontal Extrusion
10,10A	1,1	28" TSP46 curved Horizontal Extrusion
12,12A	1,1	84.4392" TSP49 curved Horizontal Extrusion

TSP46

TSP49
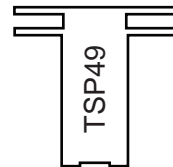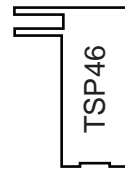
Steps:

Assemble frames flat on floor, then raise upright to attach connecting extrusions.

Front Frames:
1) Assemble horizontals [8] [8A] between verticals [2A] [3A], then connect horizontals [9] [9A] between verticals [3B] [4A], and attach horizontals [10] [10A] between verticals [4B] [5A]. See TSP46 Corner Connection detail.
2) Attach vertical [2] to vertical [2A], using cam locks. See Custom Cam Lock for TSP46 detail.
3) Attach vertical [3] between [3A] and [3B], using cam locks.
4) Attach vertical [4] between [4A] and [4B], using cam locks.
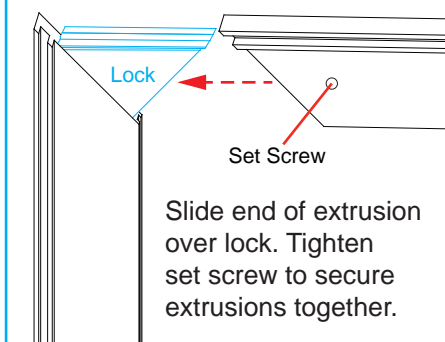5) Attach vertical [5] to vertical [5A], using cam locks.

Back Frame:
6) Connect horizontals [12] [12A] between verticals [1A] [6A]. See TSP49 Corner Connection detail.
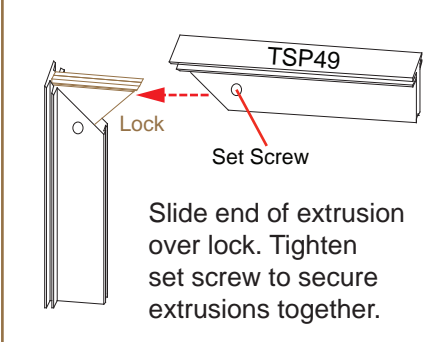7) Attach frame assembly [8/8A/2A/3A] between verticals [2,3], using cam locks. See Custom Cam Lock for TSP49 detail.
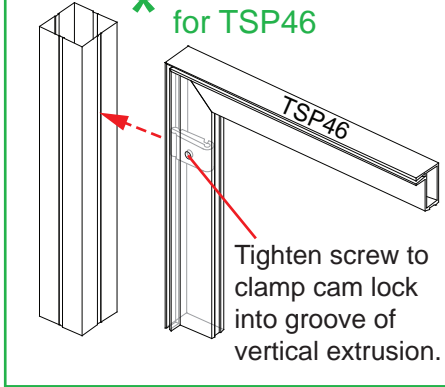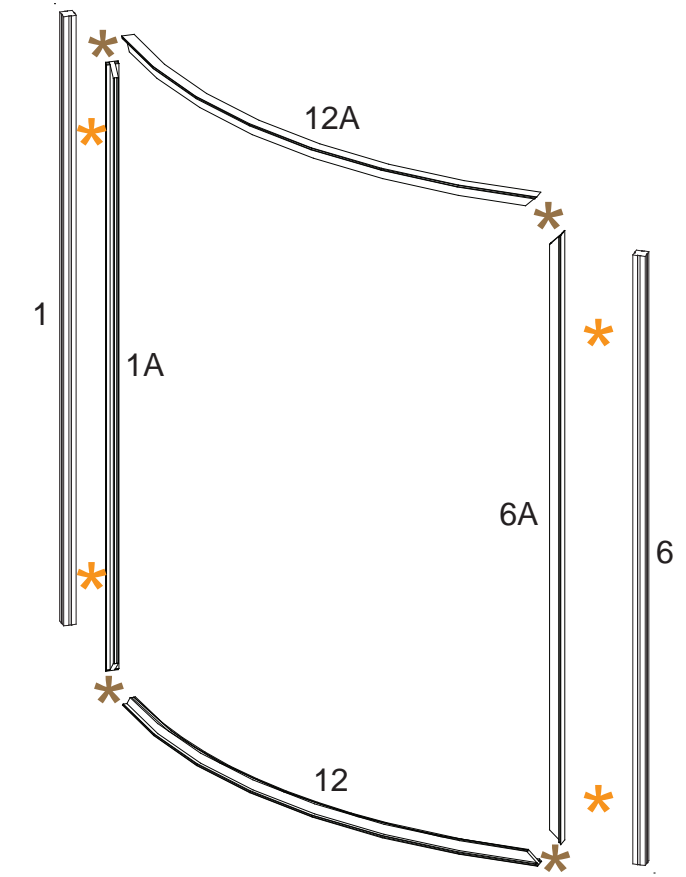
Completed Frames Assembly

✻ TSP46 Corner Connection
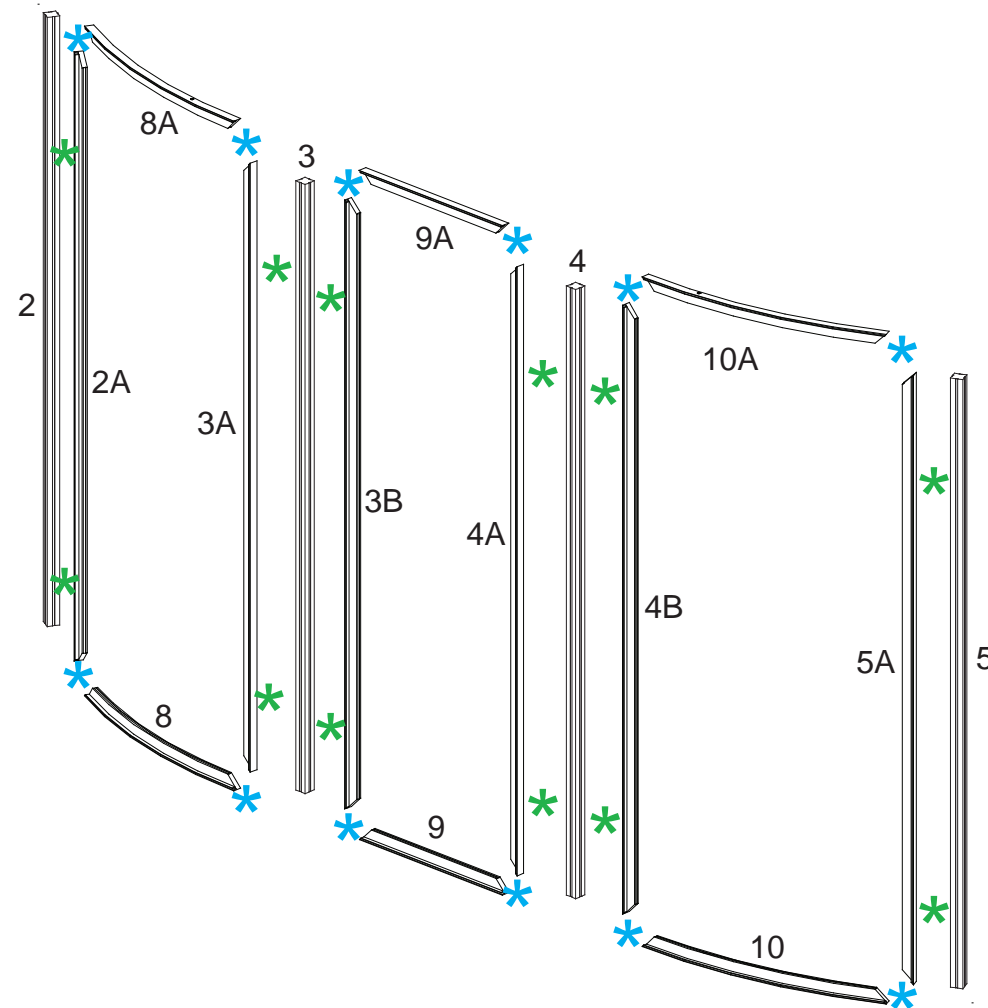Lock
Set Screw
Slide end of extrusion over lock. Tighten set screw to secure extrusions together.

✻ TSP49 Corner Connection
TSP49
Lock
Set Screw
Slide end of extrusion over lock. Tighten set screw to secure extrusions together.

✻ Custom Cam Lock for TSP46
TSP46
Tighten screw to clamp cam lock into groove of vertical extrusion.

✻ Custom Cam Lock for TSP49
TSP49
Tighten screw to clamp cam lock into groove of vertical extrusion.

VISIONARY™
DESIGNS
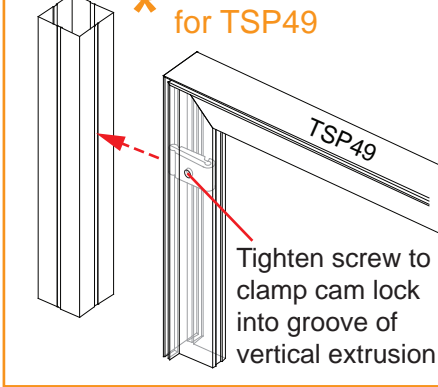
Item	Qty.	Description
7,7A	1,1	28" Z45 Horizontal Extrusion
11,11A	1,1	28" Z45 Horizontal Extrusion
13	1	88.417" Z33 Vertical Extrusion
--	1	Door Threshold
--	2	Infill

Steps:
8) Attach horizontal [7] between vertical [1] and [2], then slide
   Infill between verticals then secure with upper horizontal [7A].
9) Install door threshold between verticals [5] and [6].
   See Door Threshold Attachment detail.
10) Connect horizontal [11] between verticals [5] and [6], then slide
    Infill between verticals then secure with upper horizontal [11A].
11) Attach vertical [13] between horizontals [12] and [12A].
12) Connect door between verticals [5] and [6].
    See Door Connection detail.
13) Apply SEG graphics to front and back of closet assembly.
    See SEG Graphic Installation sheet for instruction.

7A

1
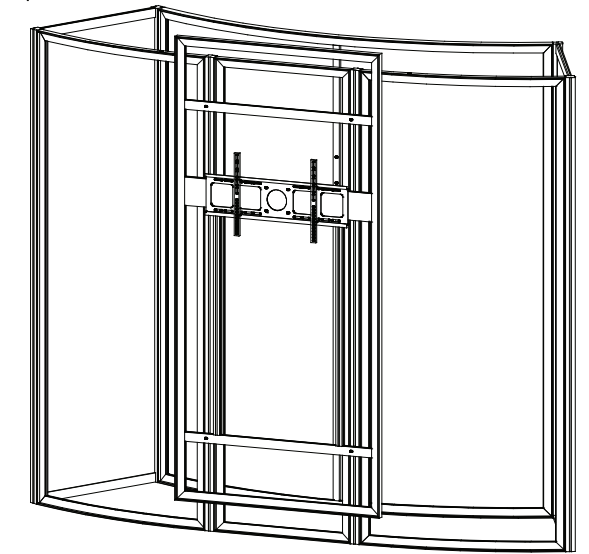
Infill

2

12A

11A

6

Infill

5

13

11

*

Door

7

12

*

*

Completed Closet Assembly

* Door Threshold Attachment

Slide Connector into groove of extrusion.

Tighten setscrew to secure.

Door Threshold

* Door Connection

Slide Pin into Hinge attached to Vertical. Slide Door Hinge over Pin.

Door Hinge

Pin

Hinge

SEG Graphic

SEG Graphic

SEG Graphic

SEG Graphic

SEG Graphic

VISIONARY DESIGNS™
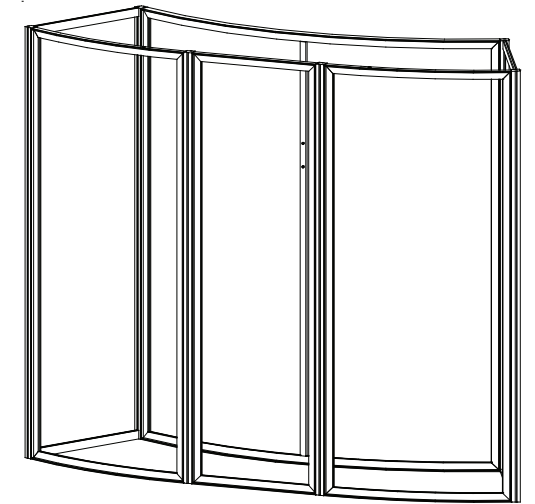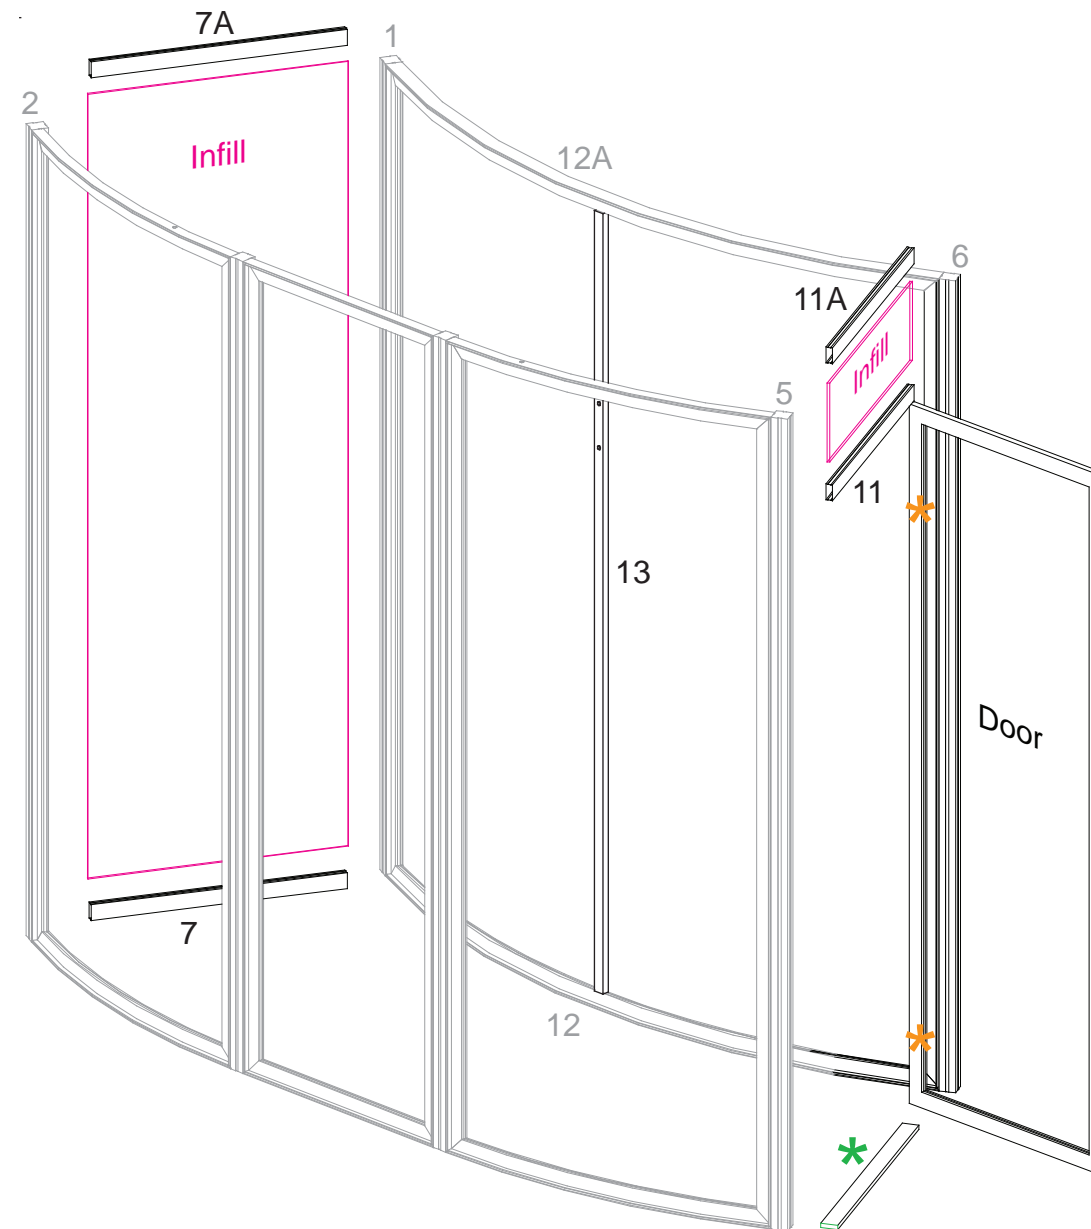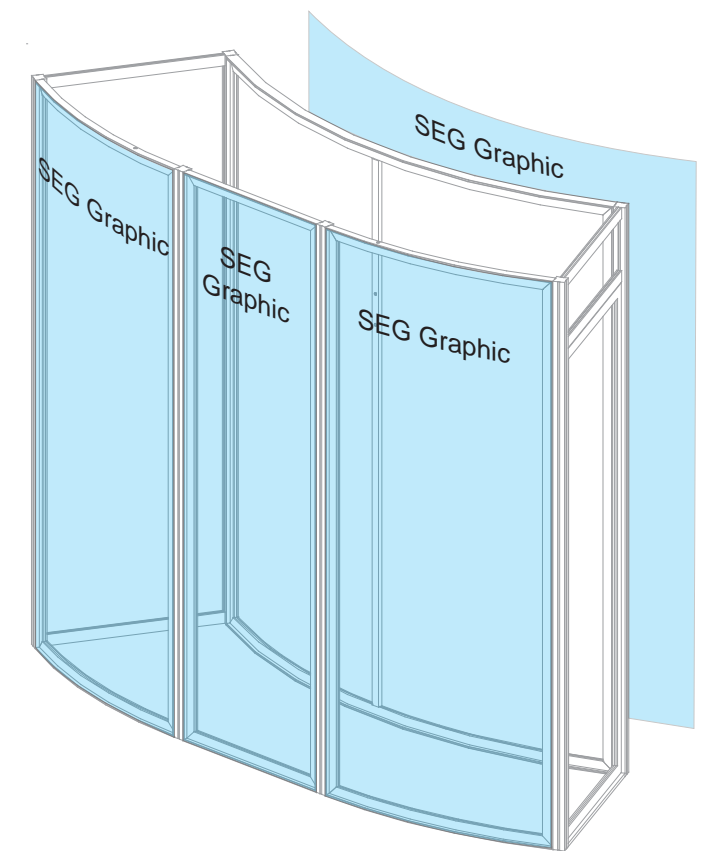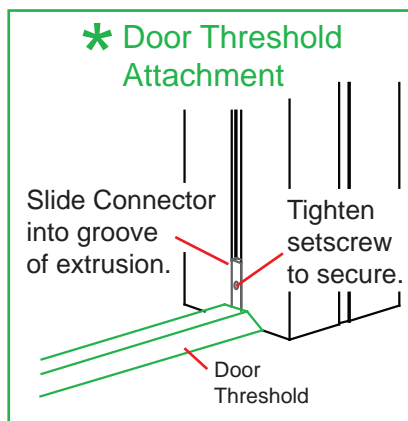
Item	Qty.	Description
14,14A	1,1	42" TSP46 Horizontal Extrusion
15,15A	1,1	90" TSP46 Vertical Extrusion
16,16A	1,1	38.417" Z45 Horizontal Extrusion
17	1	38.417" Z140 Horizontal Extrusion
18	2	44" S40 Vertical Extrusion

Steps:
1) Connect horizontals [14,14A] between verticals [15,15A].
   See TSP46 Corner Connection detail.
2) Attach horizontals [16] [16A] and [17] between verticals [15]
   and [15A], with verticals [18] between horizontals [16] and [17].
3) Attach assembled frame to closet verticals [3] and [4],
   using standoffs.
4) Attach monitor mount to horizontal [17]. See
   Monitor Mount Attachment detail.
5) Install SEG graphic to front of frame. See SEG Graphic
   Installation sheet for instruction.

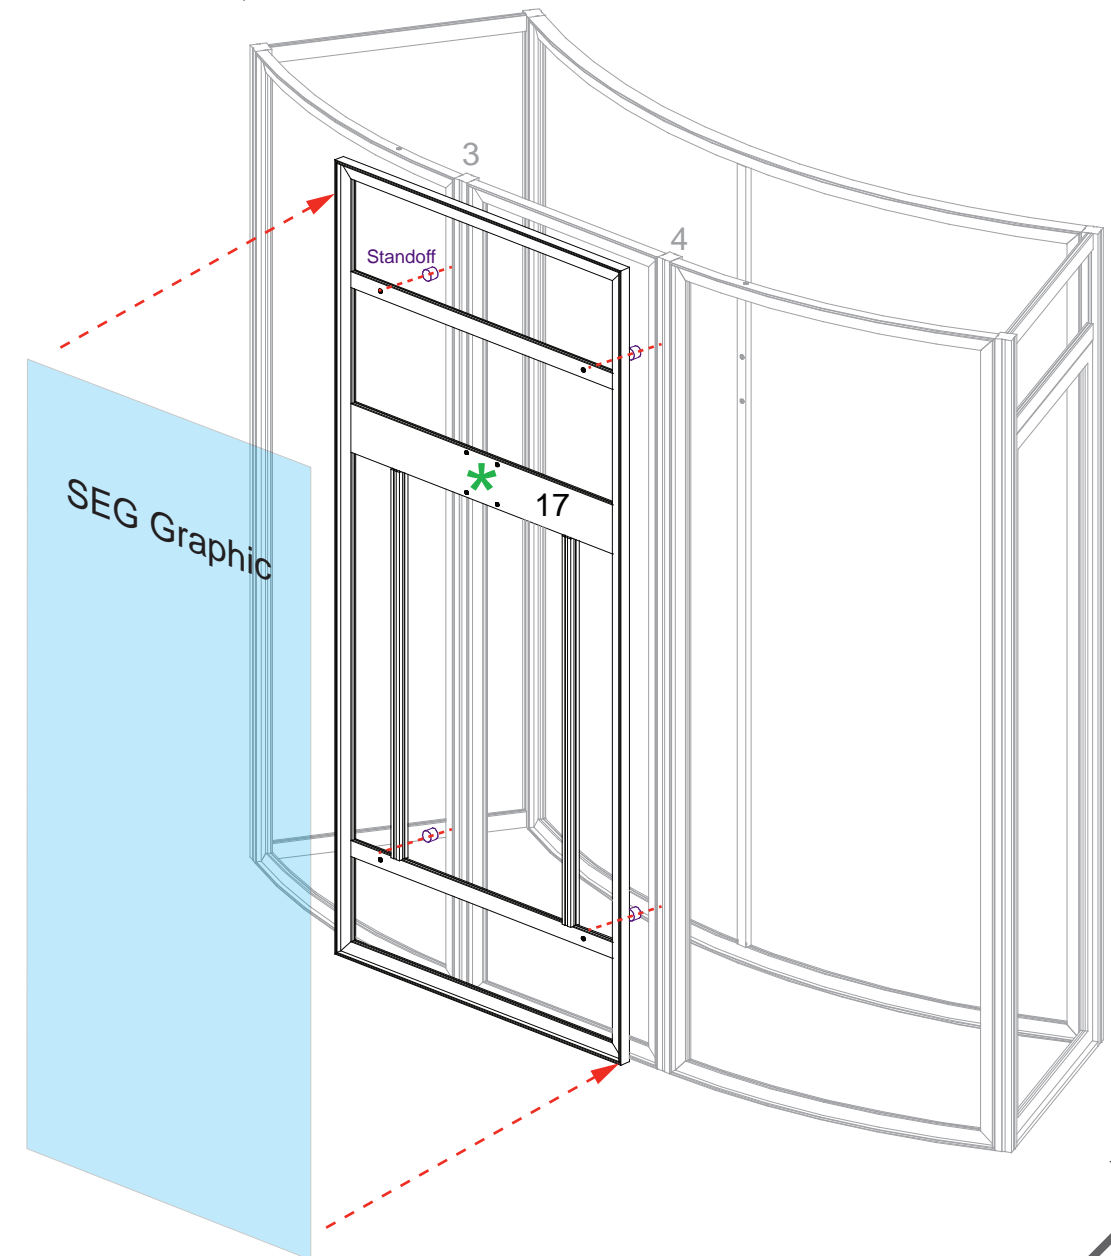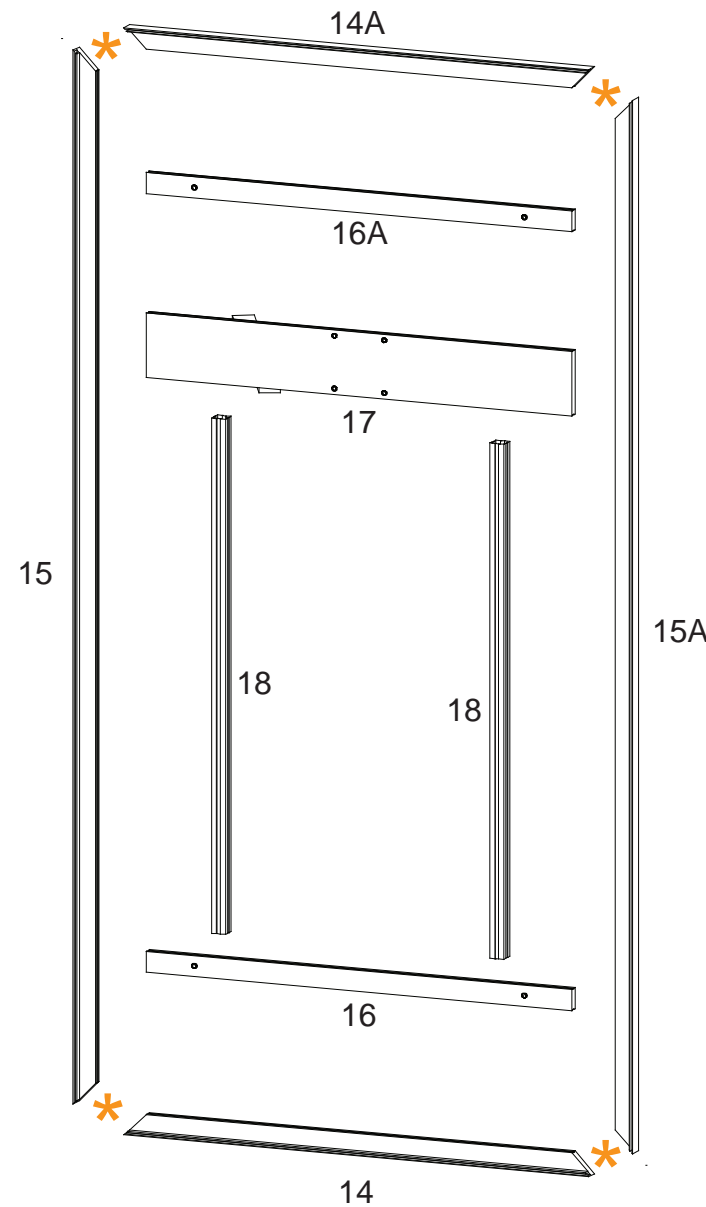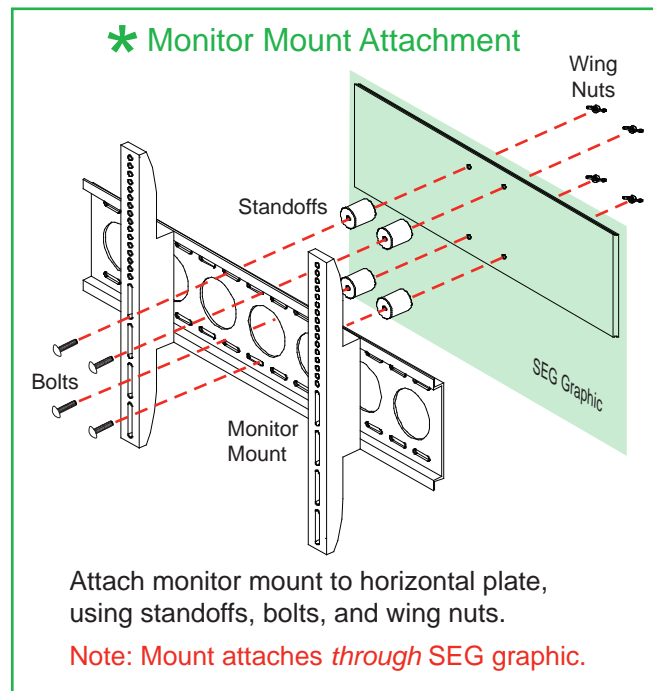**✱ TSP46 Corner Connection**

Lock

Set Screw

Slide end of extrusion over
Lock. Tighten set screw to
secure extrusions together.
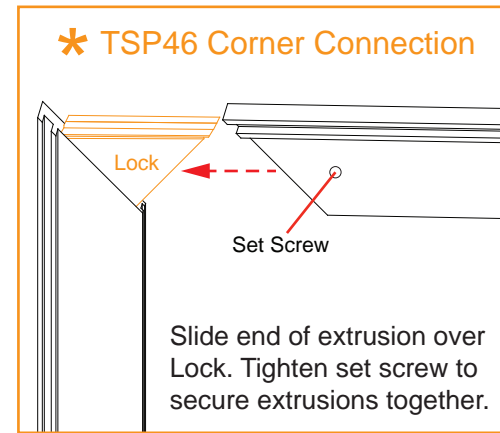
Completed Closet Assembly
with Front Frame

✱ Monitor Mount Attachment

Wing Nuts

Standoffs

Bolts

Monitor Mount

SEG Graphic

Attach monitor mount to horizontal plate,
using standoffs, bolts, and wing nuts.
Note: Mount attaches *through* SEG graphic.

14A

16A

17

15

15A

18   18

16

14

SEG Graphic

3

4

Standoff

✱ 17

visionary DESIGNS™
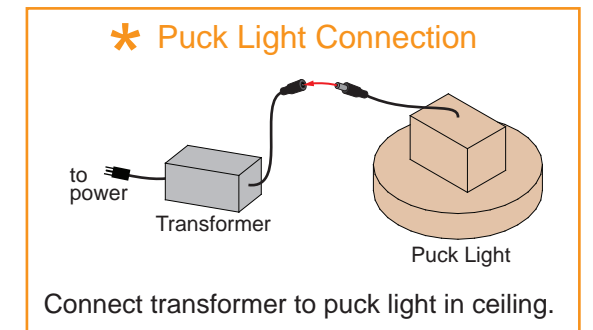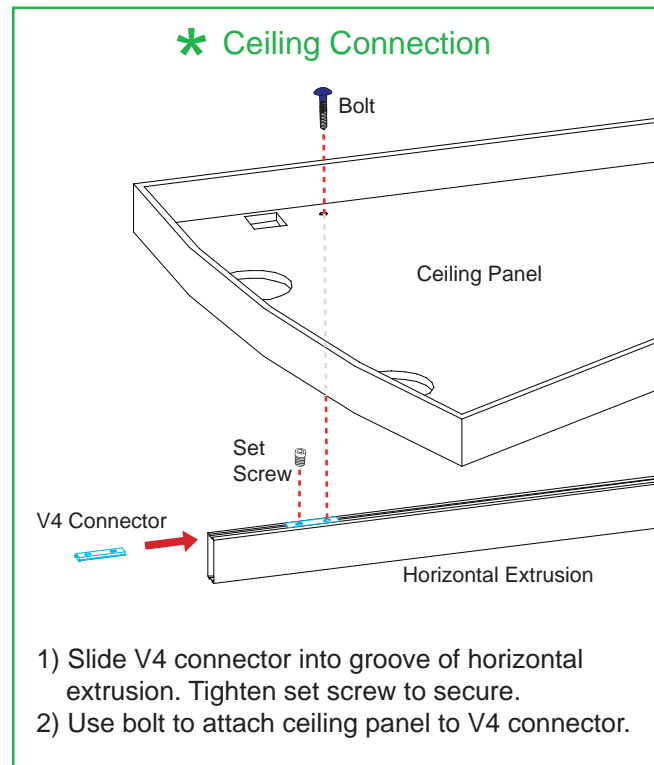
Steps:
1) Attach ceiling panels to top horizontal extrusions of closet, using V4 connectors & bolts.
   See Ceiling Connection detail.
2) Connect power cords to puck lights in ceiling panels.
   See Puck Light Connection detail. Use holes in ceiling panels for cord management.

Hole for wire management.

Ceiling Panel

Hole for wire management.

Ceiling Panel

Completed Assembly

✱ Ceiling Connection

Bolt

Ceiling Panel

Set Screw

V4 Connector

Horizontal Extrusion

1) Slide V4 connector into groove of horizontal extrusion. Tighten set screw to secure.
2) Use bolt to attach ceiling panel to V4 connector.

✱ Puck Light Connection

to power

Transformer

Puck Light

Connect transformer to puck light in ceiling.

Item	Description
1	38"h 90° Connector
2	36.9738"w x 38"h Curved Panel w/ Door
3	38"h 90° Connector
4	19"w x 38"h Panel
5	38"h 90° Connector
6	44.13"w x 38"h Panel
7	38"h 90° Connector
8	19"w x 38"h Panel

Steps:
1) Assemble LT Panels in numerical order, as shown.
2) Attach shelf supports to Velcro on inside of counter base then place shelf on top of supports..
3) Attach counter top to assembled counter base. See Counter Top Lock detail.

[5] [6] and [7] stay together when packing.

Counter Top

Door

Shelf

Shelf support

Completed Assembly

Top View of Counter Base

Door

✱ Counter Top Lock

1	2
Hole Pin	
Align hole with pin	Rotate pin. Spring will push pin into hole.